




Owner's Manual

Dishwashers

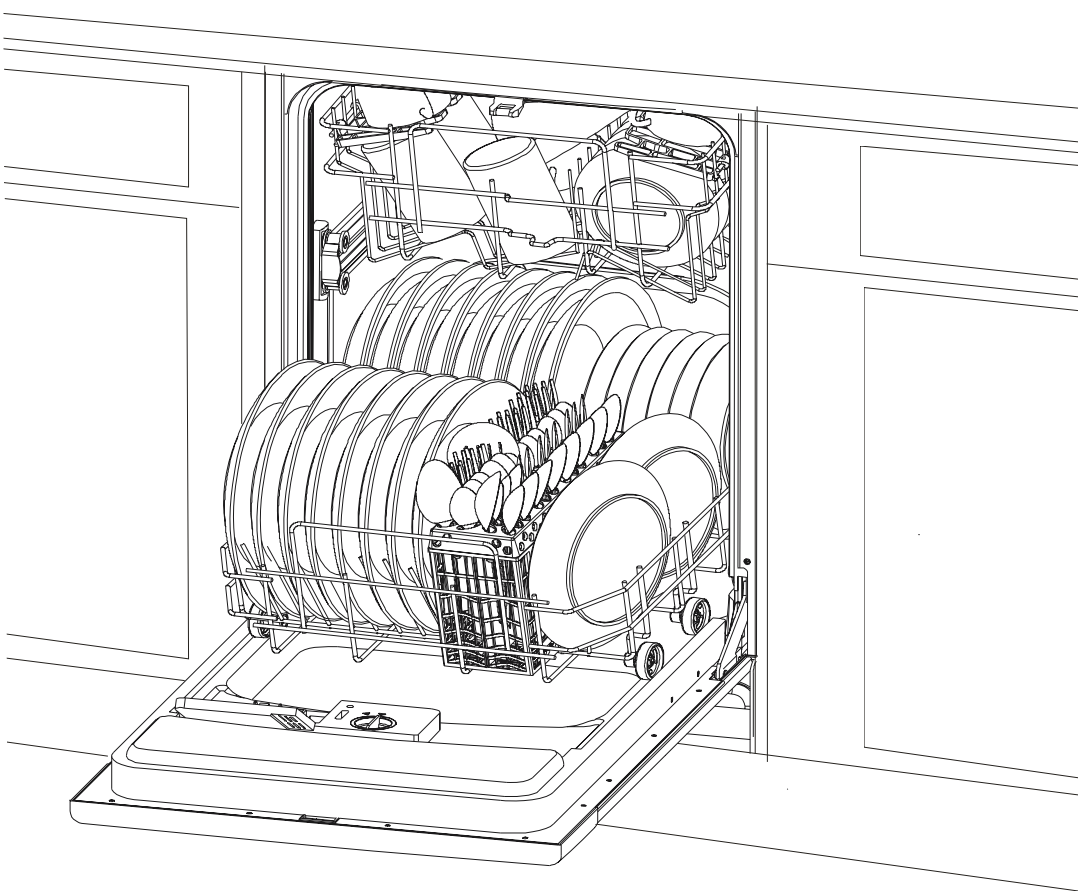

Model SB 77 & WB 77

SAVE THESE INSTRUCTIONS

We & You, A Service Partnership

Thank you for buying this product. As a home appliances producer, we are proud of our quality products and we are committed to providing dependable service. We are able to utilize our global resources in creating innovation that makes housework lighter and easier, and provide a truly comfortable home for you to relax and enjoy.



Read this Manual

This manual contains sections of Safety Instructions, Operating Instructions, Installation Instructions and Troubleshooting Tips etc. Carefully reading it before using the dishwasher will help you to use and maintain the dishwasher properly.



Before Calling for Service

To review the section on Troubleshooting Tips will help you to solve some common problems by yourself and not need to ask for the help of professional technicians.



If You Need Service

If you can not solve the problems by yourself after reading the section of Troubleshooting Tips, please contact the professional technicians of the service center. We are happy to help you with your questions, 24 hours a day, 7 days a week.

| | |
|---------------------------------|---|
| <i>Safety Information</i> | 1 |
|---------------------------------|---|

Operating Instructions

| | |
|-----------------------------------|-----|
| Control Panel | 2 |
| Dishwasher Features | 2 |
| Wash Cycle Table | 3 |
| Detergent Dispenser | 4 |
| Rinse Aid Dispenser | 4 |
| Loading the Dishwasher Rack | 5,6 |
| Turning On the Appliance | 6 |
| Filtering System | 7 |
| Caring for the Dishwasher | 7,8 |

Troubleshooting Tips

| | |
|---|------|
| Before calling for service | 9,10 |
| When the dishwasher has an overflow | 11 |

WARRANTY INFORMATION

Your Conserv appliance is protected by this warranty under normal, personal, family or household use (1 Year), and limited commercial use (90 days) in the USA and Canada.

WARRANTY

Conserv Appliances undertakes to the consumer-owner to repair or, at Conserv Appliances' option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in the USA and Canada, for a period of one year from the date of original purchase.

For commercial use, the product is warranted for a period of 90 days.

During this period, Conserv Appliances will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with Conserv Appliances' written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner.

EXCLUSIONS

In no event shall Conserv Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God.

This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

- Installation -e.g. improper hook-up or leveling
- Maintenance - e.g. cleaning of air and/or water filter
- Damage - e.g. Replacing broken door handle

Most work is covered. The defining factor is, has the machine malfunctioned (Conserv appliances is responsible) or has the customer omitted or done something to cause machine to malfunction (customer is responsible). Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Conserv Appliances
10216 Georgibelle Drive, Suite 900D
Houston, TX 77043-2459
Tel: 800-935-1955

Service under this warranty must be obtained by the following steps, in order:

Call an Conserv Appliances Authorized Service Agent (obtain number of nearest agent from your dealer or by calling Conserv Service at 800-935-1955). Under normal circumstances, Service will be provided during regular business hours (9:00 a.m. to 5:00 p.m. weekdays).

GENERAL

Since it is responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Conserv Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

Remember to send in your Warranty Registration Card so that a proof of your purchase exists with Conserv. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Corporate Office

Conserv Appliances
10216 Georgibelle Drive, Suite 900D
Houston, TX 77043-2459
Tel: 800-935-1955

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING

WARNING!

When using your dishwasher, follow the below basic precautions.



GROUNDING INSTRUCTIONS

Power Cord Models

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed in accordance with all local codes and ordinances.

WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance; If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Cable Direct

This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on appliance.




WARNING! PROPER USE

- n Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- n Do not touch the heating element during or immediately after use.
- n Do not wash plastic items unless they are marked dishwasher safe or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.
- n Use only detergent and rinse additives designed for an automatic dishwasher. Never use soap, laundry detergent, or hand washing detergent in your dishwasher. Keep these products out of children.
- n Keep child away from detergent and rinse aid, keep child away from the open door of the dishwasher, there could still be some detergent left inside.
- n The door should not be left in the open position since this could present a tripping hazard.
- n During installation, the power supply must not be excessively or dangerously bent or flattened.
- n To reduce the risk of injury, do not allow children to play in or on a dishwasher.
- n Do not operate your dishwasher unless all enclosure panels are properly in place. Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- n Do not place any heavy objects or stand on the door when it is open. The appliance could tip forward.
- n When loading items to be washed:
 - 1) Locate sharp items so that they are not likely to damage the door seal;
 - 2) Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- n When using your dishwasher, you should prevent plastic items from contacting with heating element.
- n If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- n Please dispose of packing materials properly.
- n Use the dishwasher only for its intended function.
- n Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.
- n Do not tamper with controls.

READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY


SAVE THESE INSTRUCTIONS

CONTROL PANEL

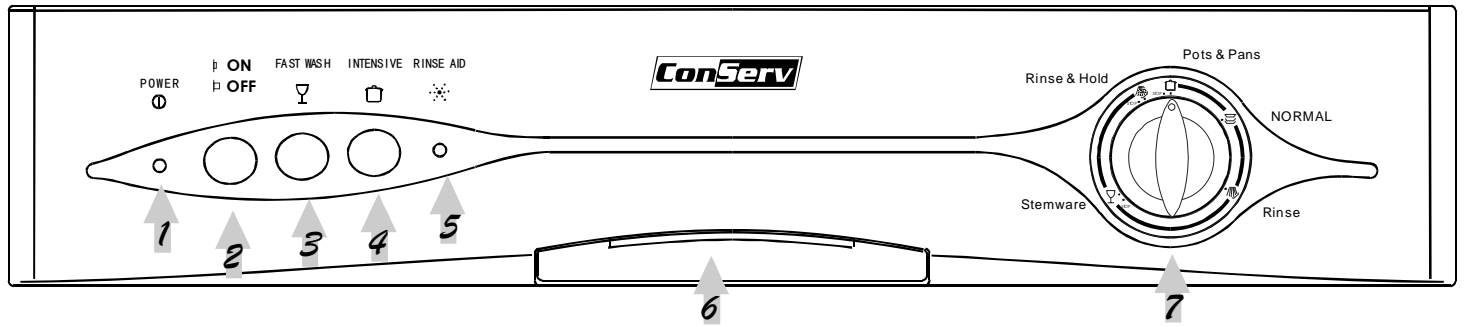





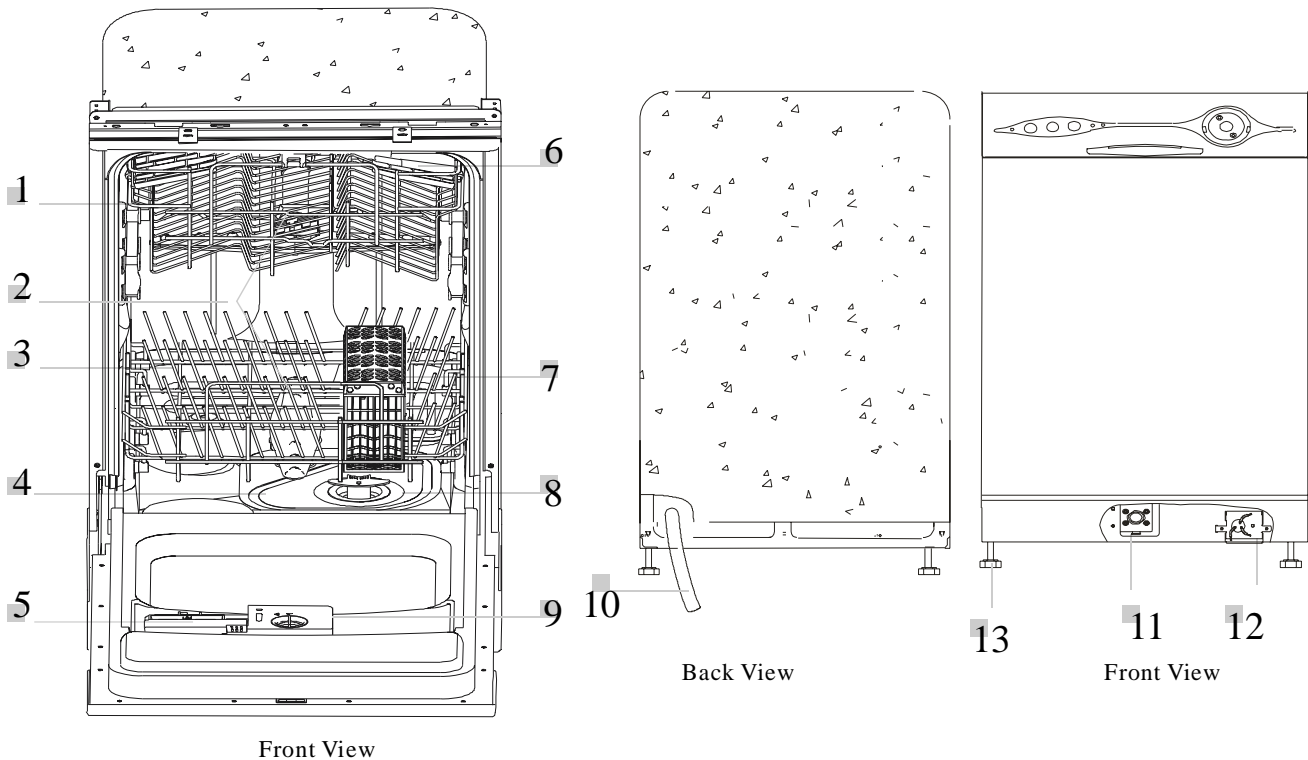


- 1 Power ON Light: To come on when the ON/OFF Button is pressed down.
- 2 ON/OFF Button: To turn on/off the power supply.
- 3 Fast Wash Button: Only used with cycle Stemware "☐".
- 4 Intensive Button: Only used with cycle Pots & Pans "☐".
- 5 Rinse Aid Warning Light: To come on when dispenser needs to be refilled.
- 6 Door Handle: Pull it to open the door.
- 7 Washing Program Selector: Turn the knob clockwise to select wash cycles.

DISHWASHER FEATURES



- | | | | |
|---------------|-----------------------|-----------------------|-----------------|
| 1 Upper Rack | 5 Detergent Dispenser | 9 Rinse Aid Dispenser | 13 Leveling Leg |
| 2 Spray Arms | 6 Cup Shelf | 10 Drain Hose | |
| 3 Lower Rack | 7 Silverware Basket | 11 Inlet Valve | |
| 4 Main Filter | 8 Coarse Filter | 12 Junction Box | |

 WASH CYCLE TABLE

| Program | Cycle | Intensive Button | Fast Wash Button | Cycle Selection Information | Description of Cycle | Detergent pre/main | Rinse Aid |
|--------------|---|------------------|------------------|--|--|--------------------|-----------|
| Pots & Pans |  | | | For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. standard daily cycle. | Pre-wash Pre-wash Wash (125.6°F) Rinse (158.0°F) Drying | 0.18/0.88 oz. | ★ |
| Intensive |  | ★ | | For the heaviest soiled loads, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for a while. | Pre-wash Pre-wash (125.6°F) Wash (140.0°F) Rinse Rinse (158.0°F) Drying | 0.18/0.78 oz. | ★ |
| NORMAL |  | | | For lightly soiled loads, such as plates, glasses, bowls and lightly soiled pans. | Wash (125.6°F) Rinse (158.0°F) Drying | 0.78 oz. | ★ |
| Rinse |  | | | For dishes that need to be rinsed and dried only. | Rinse (158.0°F) Drying | | ★ |
| Glass |  | | | For lightly soiled loads, such as glasses, crystal and fine china. | Wash (125.6°F) Rinse (143.6°F) Drying | 0.53 oz. | |
| Rapid |  | | ★ | A shorter wash for lightly soiled loads that do not need drying. | Wash (125.6°F) Rinse | 0.53 oz. | |
| Rinse & Hold |  | | | To rinse dishes that you plan to wash later that day. | Pre-wash | | |

WASH CYCLE ADJUSTMENT BUTTONS

Intensive

This button (see " Control panel ") is used with the normal cycle in the case where pots and pans with dry caked-on food must be washed.

This is not recommended for delicate items in so far as the high temperature could make their surfaces opaque or lighten decorative colors after repeated washing.

Fast Wash

This button (see " Control panel ") when pressed with wash cycle 4 (glassware) makes it possible to run the wash cycle at a lower temperature (50°C) and eliminates the drying phase.

Overflow Protection

Your dishwasher has an overflow protection device which could automatically shut off the inlet valve and start the drain pump if the water overflows. If this occurs, turn off the main water supply before calling a service. If there is water in the base pan because of an overflow or small leak, the water should be removed before restarting the dishwasher.

DETERGENT DISPENSER


YOU MAY NOT ADD TOO MUCH DETERGENT TO PREVENT THE FORMATION OF DEPOSITS BECAUSE YOUR DISHWASHERS HAVE SPECIALLY-DESIGNED WATER SOFTENERS.

The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Wash Cycle Table". Your dishwashers use less detergent and rinse aid than conventional dishwashers. Generally, only one tablespoon of detergent is needed for a normal wash load. Also, more heavily soiled items need more detergent. Always add the detergent just before starting dishwasher, otherwise it could get damp and will not dissolve properly.

Amount of Detergent to Use

IF THE WATER ISN'T TOO HARD, YOU MAY ALSO PREVENT THE FORMATION OF DEPOSITS BY ADDING DETERGENT.

The amount of detergent needed can vary due to differences in water hardness. To determine the water hardness in your area, contact your local water utility or area water softening company. The harder the water, the more detergent you may need. Remember, you should adjust the amount of detergent you use by small amounts until you find the correct amount.

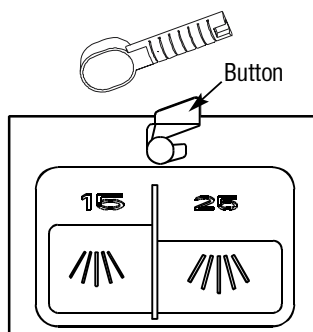

To open the wash cover, press the button and the cover will flip back.

⚠ WARNING!

Dishwasher detergent is corrosive! Take care to keep it out of reach of children.

Removing Hard Water Spots

To remove hard water spots, try the following:

- Run dishes through a normal wash program.
- Remove all metal dishware, such as cutlery, pans, etc., from the dishwasher.
- Do not add detergent.
- Pour two cups of vinegar into a bowl and set the bowl face up on the lower rack of the dishwasher.
- Run the dishwasher through a normal wash program.

If this doesn't work, try the same process with 1/4 cup of citric acid crystals instead of vinegar.

Proper Use of Detergent

Use only detergent specifically made for use in dishwashers. Keep your detergent fresh and dry. Don't put powder detergent into the dispenser until You're ready to wash dishes.

RINSE AID DISPENSER

Filling the Dispenser

The rinse agent dispenser holds 3.5 oz. of rinse agent. Under normal conditions, this will last approximately one month. Try to keep it full, but do not overfill.

- Make sure the dishwasher door is fully open.
- Turn the dispenser knob to the left and lift it out.
- Add rinse agent until the indicator window looks full.
- Clean up any spilled rinse agent with a damp cloth.
- Replace the dispenser knob.


Rinse Aid Setting

The amount of rinse agent released into the final wash can be adjusted.

The factory setting is at the midpoint. If there are rings of calcium (hard water) spots on dishes, try a higher setting.

To adjust the setting

Remove the dispenser knob; then turn the adjuster counterclockwise to increase the amount of rinse agent.

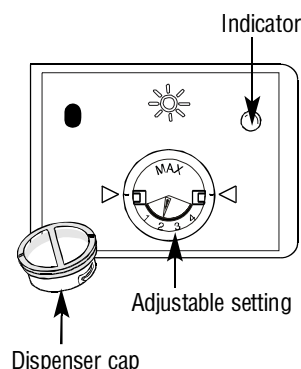

Loading the Dishwasher Racks.


For best performance of the dishwasher, follow these loading guidelines. Features and appearance of racks and silverware baskets may vary from your model.

How to use the Upper Rack

The upper rack is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cup and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty).

Position the dishes and cookware so that they do not get moved by the spray of water.

The upper rack can be adjusted for height by putting wheels of different height into the rails.

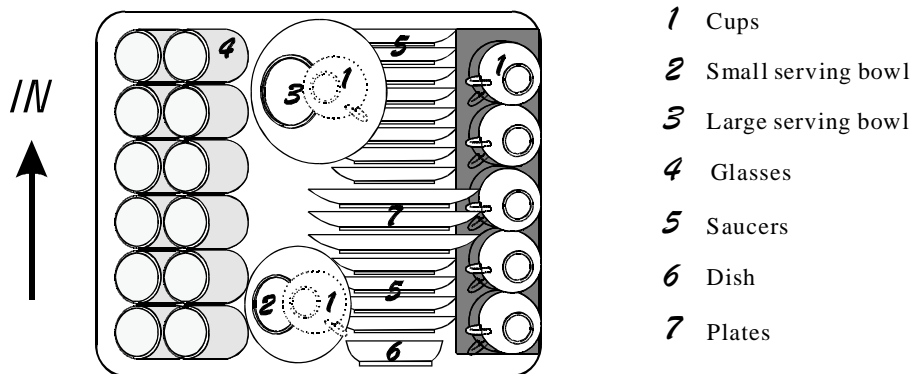


How to use the Lower Rack


We recommend that you place large items which are most difficult to clean into the lower rack: pots, pans, lids, serving dishes and bowls, as shown in the figure to the right.

It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

- Pots, serving bowls, etc, must always be placed top down.
- Deep pots should be slanted to allow water to flow out.
- The bottom rack feature fold down tine rows so that larger or more pots and pans can be loaded.

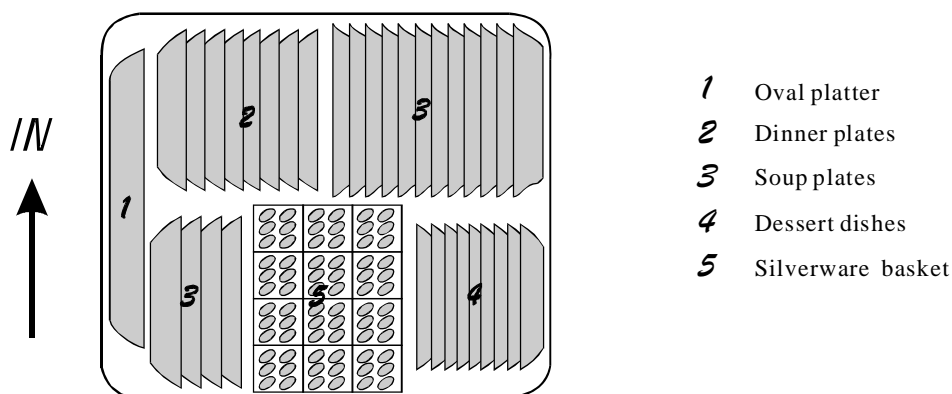

SILVERWARE BASKET

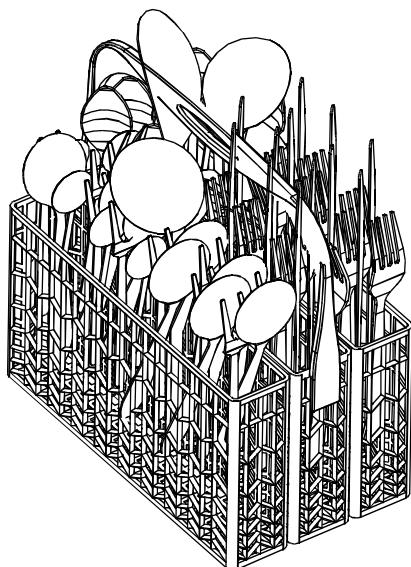

Put the flatware in the removable basket with fork and knife handles up to protect your hands. Place spoons in the basket with handles down. Mix knives, forks and spoons so they don't nest together. Distribute evenly. Small plastic items, such as measuring spoons and lids from small containers, should go in the bottom of the silverware basket with silverware on top.



▲ WARNING!

Do not let any item extend through bottom.

TURNING ON THE APPLIANCE

Starting a wash cycle. . .


- 1 Make sure that the plug for the appliance is inserted into the wall socket.
- 2 Make sure that the water supply is turned on to full pressure.
- 3 Load the dishwasher (see the section entitled, " Loading the Dishwasher ").
- 4 Pour in the detergent (see the section entitled, " Salt, Detergent and Rinse Aid ").
- 5 Turn the knob located on the right of the control panel in the clockwise direction until the number or the symbol for the cycle setting is aligned with the reference mark (see the section entitled, " Wash Cycle Table ").
- 6 Press the ON/ OFF button, and the ON/OFF light will turn on. At this point, the wash cycle will begin.

Canceling or modifying a wash cycle setting. . .

Premise: A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the paragraph entitled "Loading the Detergent").

Press the ON/OFF button, and the ON light will turn off. Rotate the knob in the clockwise direction to the desired cycle setting (see the section entitled, "Starting a wash cycle. . ."). Then, turn the dishwasher back on using the on the ON/OFF button.

At the End of the Wash Cycle

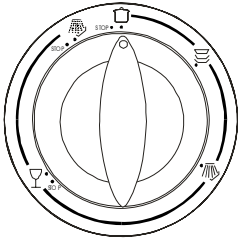

When the knob stops turning and is aligned with a STOP mark(see figure), the cycle has finished . Turn off the appliance using the ON/OFF button, shut off the water supply and open the door of the dishwasher. Wait a few minutes before unloading the dish washer to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.


Forget to Add a Dish?

A forgotten dish can be added any time before the detergent cup opens.

- 1 Pull the door handle.
- 2 Do not open the door until the water spray action stops. Steam may rise out of the dishwasher.
- 3 Add forgotten dishes.
- 4 Push the door to close it. When the door is close rightly a click will be sound.


FILTERING SYSTEM

For your convenience, we have placed the drain pump and filtering system within easy reach inside the tub. There are three components of the filtering system: the main filter, the coarse filter, and the fine filter.

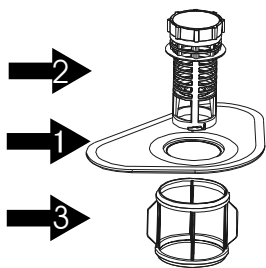


- 1 Main filter
Food and soil particles trapped by this filter are pulverized by a special jet on the lower spray arm and washed down the drain.
- 2 Coarse filter
Larger items, such as pieces of bone or glass, that could clog the drain are trapped in the coarse filter. To remove an item caught in this filter, gently squeeze the tabs on top of this filter and lift it out.
- 3 Fine filter
This filter holds soil and food residue in the sump area and prevents it from being redeposited on the dishes during a cycle.


- Inspect the filters for obstructions every time the dishwasher has been used.
- By unscrewing the coarse filter,you can remove the filter system.Remove any food remnants and clean the filters under running water.

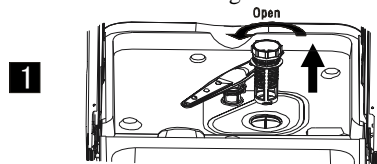

step 1 : contrarotate the Coarse filter, and then lift it up;

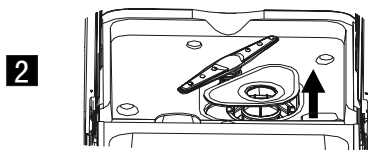

step 2 : lift the Main filter up

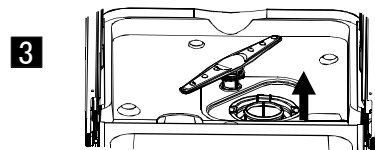

step 3: lift the Fine filter up

NOTE: If do it from step1 to step 3, the filter system will be removed; while if do it from step3 to step 1, the filter system will be installed.

CARING FOR THE DISHWASHER


To clean the control panel use a lightly dampened cloth then dry thoroughly. To clean the exterior use a good appliance polish wax.

Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

Protect Against Freezing

If your dishwasher is left in an unheated place during the winter, ask a service technician to:


- 1 Cut off electrical power to the dishwasher.
Remove fuses or trip circuit breaker.
- 2 Turn off the water supply and disconnect the water inlet pipe from the water valve.
- 3 Drain water from the inlet pipe and water valve.
(Use a pan to catch the water.)
- 4 Reconnect the water inlet pipe to the water valve.
- 5 Remove the plastic sump cover in the tub the bottom and use a sponge to soak up water in rubber boot.

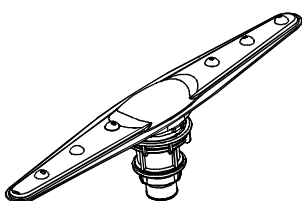

Cleaning the Spray Arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings. To remove the spray arm, screw off the nut to take out the washer on top of the spray arm and remove the arm. Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

Cleaning the Filters

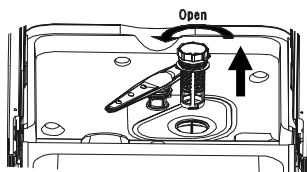

Filter assembly

For best performance and results, the filter assembly must be cleaned.

The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water.


To remove the filter assembly, pull on the cup handle in the upward direction. The entire filter assembly should be cleaned at least once a month.

To clean the coarse filter and the fine filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figures left and reinsert the entire assembly in the dishwasher, positioning in its seat and pressing downward.

The dishwasher must never be used without the filters. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

▲ WARNING!

Never run the dishwasher without the filters in place.

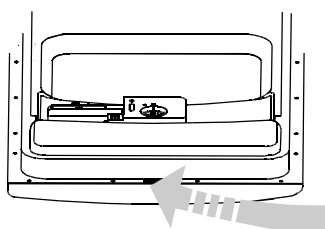

Cleaning the Door

To clean the edge around the door, you should use only a soft warm, damp rag. To prevent penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.

Also, never use abrasive cleaners or scouring pads on the outer surfaces because they will scratch the finish. Some papers towels can also scratch or leave marks on the surface.

▲ WARNING!

Never use a spray cleaner to clean the door panel for it could damage the door lock and electrical components. It is not allowed to use the abrasive agent or some paper towel because of the risk of scratching or leaving spots on the stainless steel surface.

How to Keep Your Dishwasher in Shape

■ After Every Wash

After every wash, turn off the water supply to the appliance and leave the door slightly ajar so that moisture and odors are not trapped inside.

■ No Solvents or Abrasive Cleaning Products

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Rather, use only a cloth and warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar, or a cleaning product made specifically for dishwashers.

■ When You Go on Vacation

When you go on vacation, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odors from forming within the appliance.

■ Seals

One of the factors that cause odors to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

BEFORE CALLING FOR SERVICE . . .

Troubleshooting Tips

Review the charts on the following pages may make you be free of calling for service.



| <i>Problem</i> | <i>Possible Causes</i> | <i>What To Do</i> |
|--|---|--|
| <i>Dishwasher doesn't run</i> | Fuse blown, or the circuit breaker acted | Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher |
| | Power supply is not turned on | Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket. |
| | Water pressure is low | Check that the water supply is connected properly and the water is turned on. |
| <i>Drain pump doesn't stop</i> | Overflow | The system is designed to detect an overflow. When it does, it shuts off the circulation pump and turns on the drain pump. |
| <i>Noise</i> | Some audible sounds are normal | Sound from soft food shredding action and detergent cup opening. |
| | Utensils are not secure in the baskets or something small has dropped into the basket | To ensure everything is secured in the dishwasher. |
| | Motor hums | Dishwasher has not been used regularly. If you do not use it often, remember to set it to fill and pump out every week, which will help keep the seal moist. |
| <i>Suds in the tub</i> | Improper detergent | Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then drain out the water by slowly turning the Dial until a drain period is reached. Repeat if necessary. |
| | Spilled rinse agent | Always wipe up rinse agent spills immediately. |
| <i>Stained tub interior</i> | Detergent with colorant was used | Make sure that the detergent is the one without colorant. |
| <i>Dishes are not dried</i> | Rinse agent dispenser is empty | Make sure that the rinse agent dispense is filled. |
| <i>Dishes and flatware not clean</i> | Improper program | Select stronger program |
| | Improper rack loading | Make sure that the action of the detergent dispenser and spray arms are not blocked by large dishware. |
| <i>Spots and filming on glasses and flatware</i> | <ol style="list-style-type: none"> 1 Extremely hard water 2 Low inlet temperature 3 Overloading the dishwasher 4 Improper loading 5 Old or damp powder detergent 6 Empty rinse agent dispenser 7 Incorrect dosage of detergent | <p>To remove spots from glassware:</p> <ol style="list-style-type: none"> 1 Take out all metal utensils out of the dishwasher. 2 Do not add detergent. 3 Choose the longest cycle. 4 Start the dishwasher and allow it to run for about 18 to 22 minutes, then it will be in the main wash. 5 Open the door to pour 2 cups of white vinegar into the bottom of the dishwasher. 6 Close the door and let the dishwasher complete the cycle. If the vinegar does not work: Repeat as above, except use 1/4 cup (60 ml) of citric acid crystals instead of vinegar. |

BEFORE CALLING FOR SERVICE . . .



| <i>Problem</i> | <i>Possible Causes</i> | <i>What To Do</i> |
|--|--|--|
| <i>Cloudiness on glassware</i> | Combination of soft water and too much detergent | Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean. |
| <i>Yellow or brown film on inside surfaces</i> | Tea or coffee stains | using a solution of 1/2 cup of bleach and 3 cups warm water to remove the stains by hand. ⚠ WARNING You have to wait for 20 minutes after a cycle to let the heating elements cool down before cleaning interior; otherwise, burns will happen. |
| | Iron deposits in water can cause an overall film | You have to call a water softener company for a special filter. |
| <i>White film on inside surface</i> | Hard water minerals | To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds. |
| <i>Detergent left in dispenser cups</i> | Dishes block detergent cups | Re-loading the dishes properly. |
| <i>Steam</i> | Normal phenomenon | There is some steam coming through the vent by the door latch during drying and water draining. |
| <i>Black or gray marks on dishes</i> | Aluminum utensils have rubbed against dishes | Use a mild abrasive cleaner to eliminate those marks. |
| <i>Water standing in the bottom of the tub</i> | This is normal | A small amount of clean water around the outlet on the tub bottom at the back of the tub keeps the water seal lubricated. |
| <i>Water doesn't pump out of the tub</i> | Drain is clogged | Make sure the kitchen sink is draining well. If the dishwasher drains into a disposer, run it clear. |
| <i>Dishwasher leaks</i> | Overfill dispenser or rinse aid spills | Be careful not to overfill the rinse aid dispenser. Spilled rinse aid could cause oversudsing and lead to overflowing. Wipe away any spills with a damp cloth. |
| | Dishwasher isn't level | Make sure the dishwasher is level. |

WHEN THE DISHWASHER HAS AN OVERFLOW

The dishwasher is designed to detect an overflow. When it does, water in the float container should be let out. Deal with as follows:

Uninstall the Dishwasher

It is necessary to uninstall the dishwasher when it has an overflow. Before uninstall the dishwasher, read the INSTALLATION INSTRUCTION carefully.

- Remove the toekick.
- Loose the countertop mounting brackets from the countertop of the cabinet.



⚠ WARNING!

Before uninstall the dishwasher, the power supply should be shut off. And the machine is not on operating.

Pull the Dishwasher out of the Cabinet

- After uninstall the dishwasher, pull it out of the cabinet carefully.

Let out the Water in the Float Container

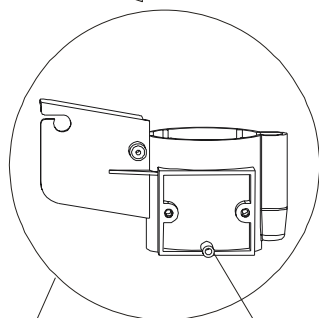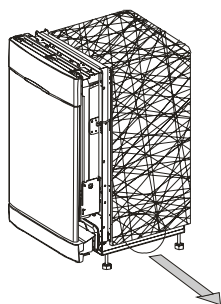

Float Container

Plug

- Pull out the plug from the float container.
- Make the water in the float container let out, and with a cup or an other container to keep the water.
- Stuff the hole of the float container with the plug when all of the water let out.

Install the Dishwasher

NOTE:

The manufacturer, following a policy of constant development and up-dating of the product, may make modifications without giving prior notice.



Conserv Appliances
10216 Georgibelle Drive, Suite 900D
Houston, TX 77043-2459
Tel: 800-935-1955